


Assembly Instructions

BIFOLD FUTON FRAME FUTON ARMS


See below for Preparation of arms for assembly.

Kingston-0404

1 One pair of Bifold Arms

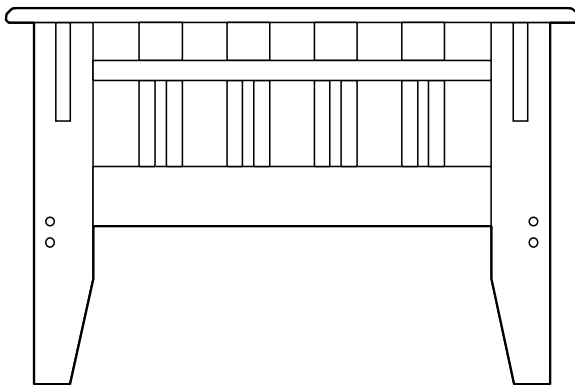


Outside View

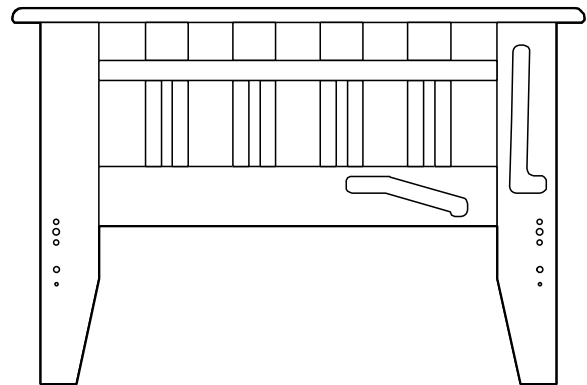


Inside View


2 Hardware in this box

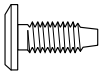

16mm Bolts x 4 Pieces:
For the Stretcher Brackets

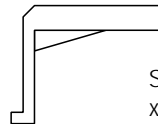

Stretcher Bracket
x 4 Pieces

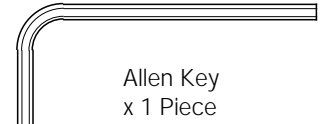

Allen Key
x 1 Piece




60mm Bolts x 8 Pieces:
For the Front & Back Legs



Wood Button
x 8 Pieces




Barrel Nuts
x 8 Pieces



Wooden Dowel
x 4 Pieces


3 Fasten Stretcher Brackets to Arm

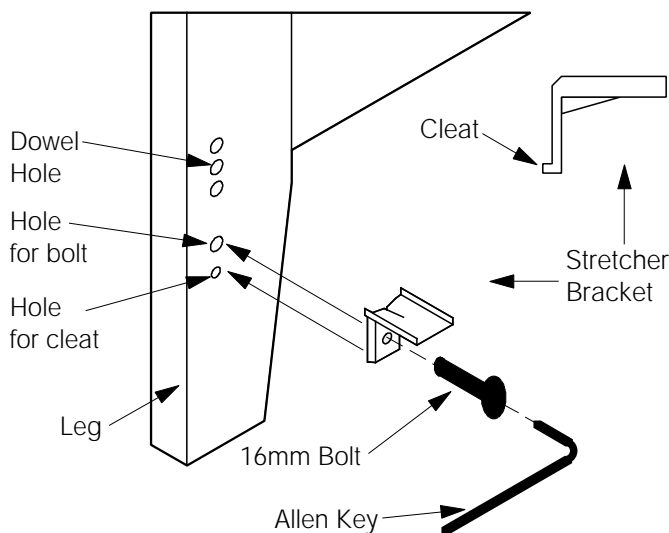

- Insert the Stretcher Bracket Cleat into the hole provided.
- IMPORTANT:** Don't fully tighten Bracket until Stretchers are all in place for easy alignment.
- Each arm requires two brackets, front and back.

4 Assemble the Bifold Body


Tap Wooden Dowels all the way into the middle hole before assembly to Arms.

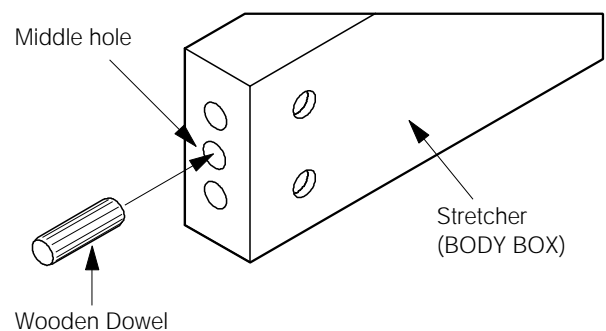

5 Fit Wood Button Into Arm Holes

AFTER TOTAL ASSEMBLY:

Push fit or lightly tap the wooden buttons into the bolt holes on the arms.

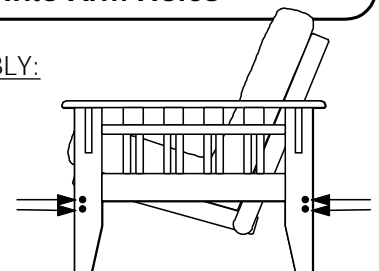

i Instructions for Bifold Body assembly, are packed in the Body box.