

FUTON FRAME

See below for Preparation of arms for assembly.


1106

One pair of Bifold Arms.

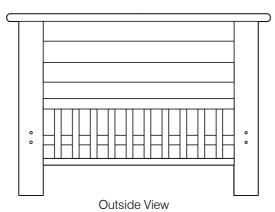

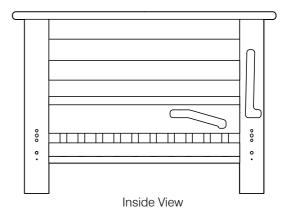


Hardware in this box.

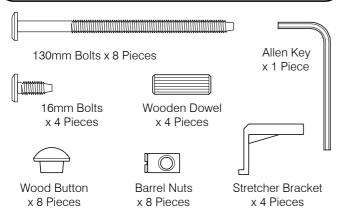


Assemble the Bifold Body.


<u>BODY INSTRUCTIONS</u>: Instructions for assembly of arms to the Bifold Body are in the BODY box.

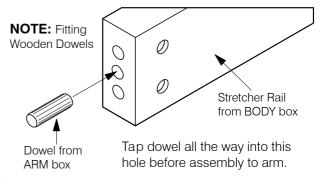

3 Fasten Stretcher Brackets to Arm.

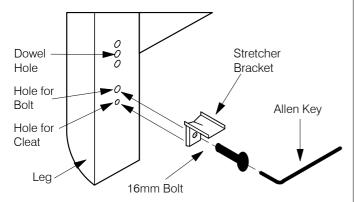



SPECIAL NOTE: Back and Seat Assembly.

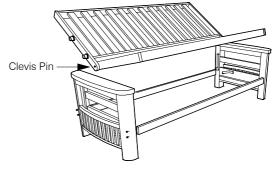

Contrary to Assembly Instructions in the BODY box, You will need to join both the Back Deck and the Seat Deck together, as shown, before fitting them between the Arms.

- A. Insert the Stretcher Bracket Cleat into the hole provided.
- B. IMPORTANT: Don't fully tighten Bracket until Stretchers are all in place for easy alignment.
- C. Each arm requires two brackets, front and back.



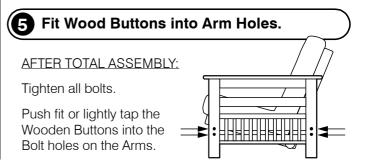

0