


## Assembly Instructions

# BIFOLD FUTON FRAME FUTON ARMS


See below for Preparation of arms for assembly.

Naples-0404

### 1 One pair of Bifold Arms

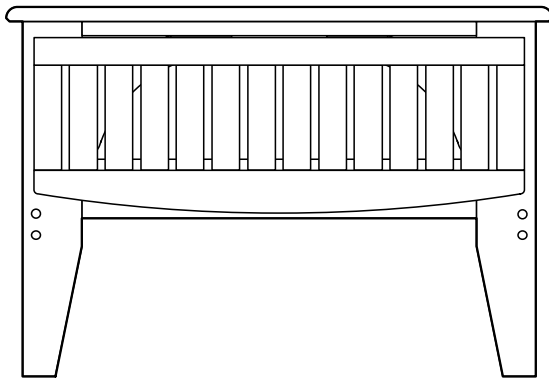


Outside View

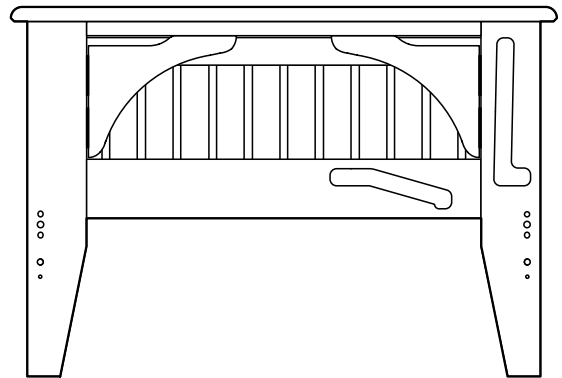


Inside View

### 2 Hardware in this box



16mm Bolts x 4 Pieces:  
For the Stretcher Brackets

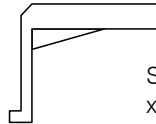

Stretcher Bracket  
x 4 Pieces



Allen Key  
x 1 Piece



60mm Bolts x 8 Pieces:  
For the Front & Back Legs



Wood Button  
x 8 Pieces




Barrel Nuts  
x 8 Pieces



Wooden Dowel  
x 4 Pieces


### 3 Fasten Stretcher Brackets to Arm

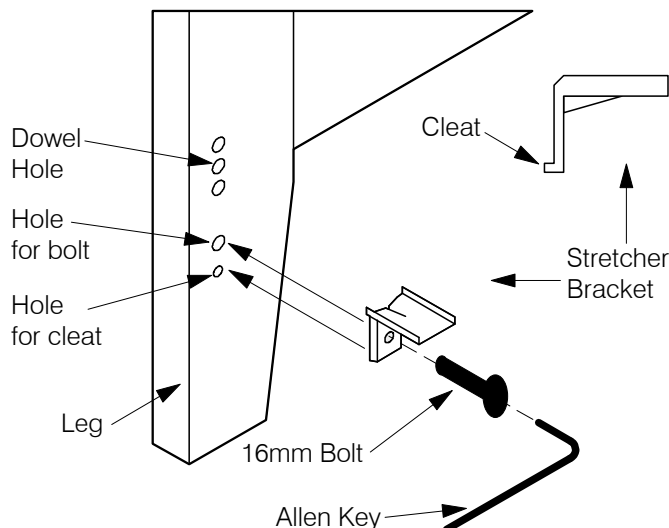

- Insert the Stretcher Bracket Cleat into the hole provided.
- IMPORTANT:** Don't fully tighten Bracket until Stretchers are all in place for easy alignment.
- Each arm requires two brackets, front and back.

### 4 Assemble the Bifold Body


Tap Wooden Dowels all the way into the middle hole before assembly to Arms.

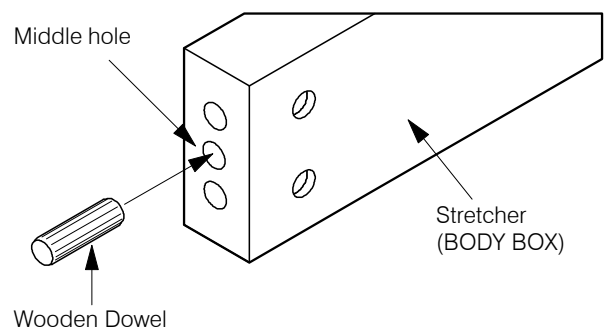

### 5 Fit Wood Button Into Arm Holes

AFTER TOTAL ASSEMBLY:

Push fit or lightly tap the wooden buttons into the bolt holes on the arms.

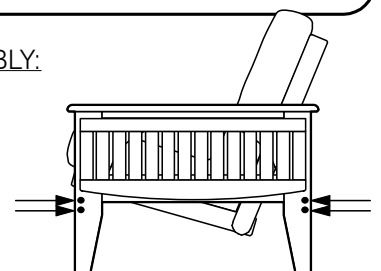

**i** Instructions for Bifold Body assembly, are packed in the Body box.