

# Assembly Instructions Ginger Twin Full Bunk Bed

N&D 0614

## SAFETY WARNING

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 in. (127 mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk.
5. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
6. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night light may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
12. The use of water or sleep flotation mattresses is prohibited.
13. **STRANGULATION HAZARD**—Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to hooks, belts and jump ropes.
14. Keep these instructions for future reference.

### **SIZE OF MATTRESS AND FOUNDATION:**

Use only mattress, which is 37 1/2" - 38 1/2" width and 74"-75" long on upper bunk (twin size.) Ensure that the thickness of the mattress does not exceed 6" and that the mattress surface is at least 5" (127mm) below upper edge of guardrails.

### **WARNING:**

Adult Assembly Required. This package contains small parts. Keep away from children.

#### **Replacement Parts:**

Replacement parts, including additional guardrails may be obtained from any Night & Day Furniture Dealer.

Certified:

This bunk bed conforms to all applicable consumer product safety standards 16 CFR PARTS 1213, 1500, 1513 and ASTM F-1427

**NIGHT**  
FURNITURE  
**DAY**™



### Note about Warning Labeling

The warning label on your bunk bed headboard is there by law, and by law is not to be removed. The adhesive used is difficult to peel off, will tear the paper leaving a residue that is difficult to clean. We recommend that you leave it where it is.





# Assembly Instructions



## Ginger Twin Full Bunk Bed

N&D 0116


### 1A Parts in Box 1

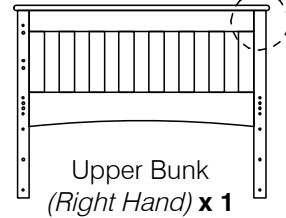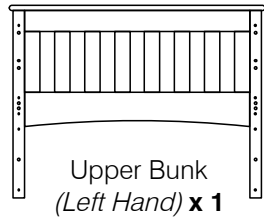


### Parts in Box 2

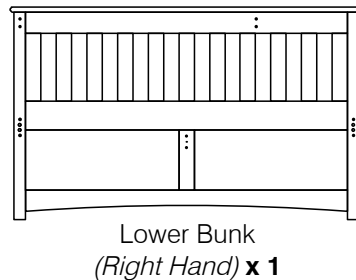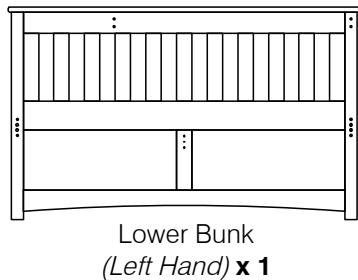






### Parts in Box 3

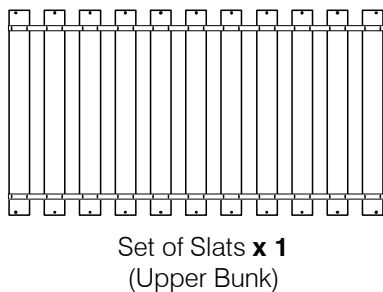






### Parts in Box 4

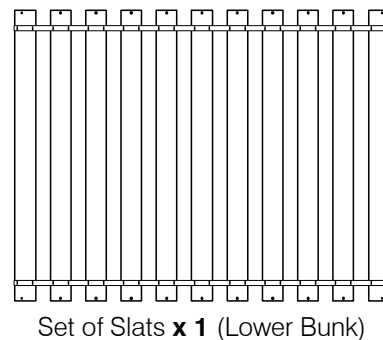

### Parts in Box 5

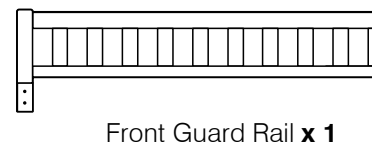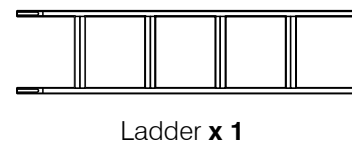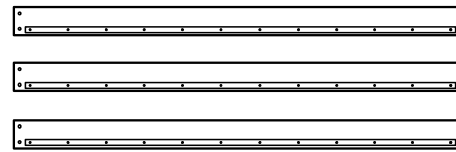


### 1B Hardware in this Box.

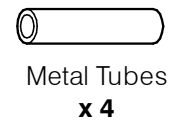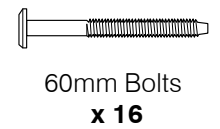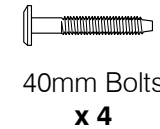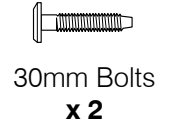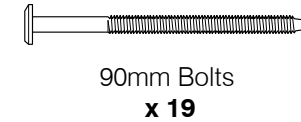

Note:

Tools required for assembly:

- Allen Key (provided)
- Phillips Screwdriver (not provided)

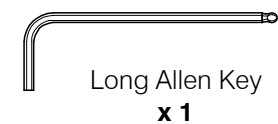


# Assembly Instructions


## Ginger Twin Full Bunk Bed

N&D 0808

### 2A Fit Wood Dowels to the Stretchers.

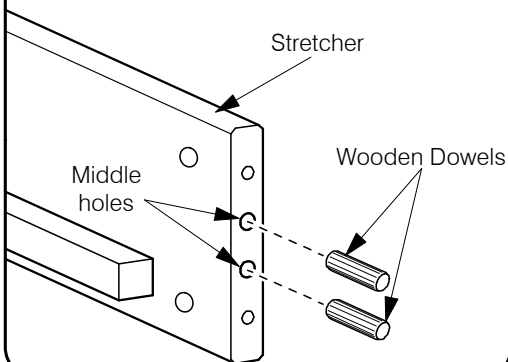


### 2B Fit Wood Dowel to the Middle Rail.

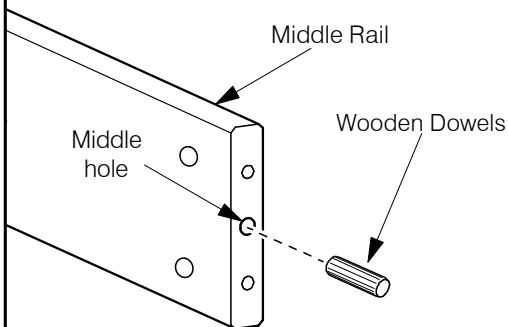


### 2C Attach Stretchers and the Middle Rail to the Lower Bunks.

Note: The Left hand Bottom Bunk has extra holes which assemble towards the front.

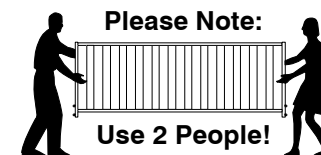

Note: The Right hand Bottom Bunk has extra holes which assemble towards the front.

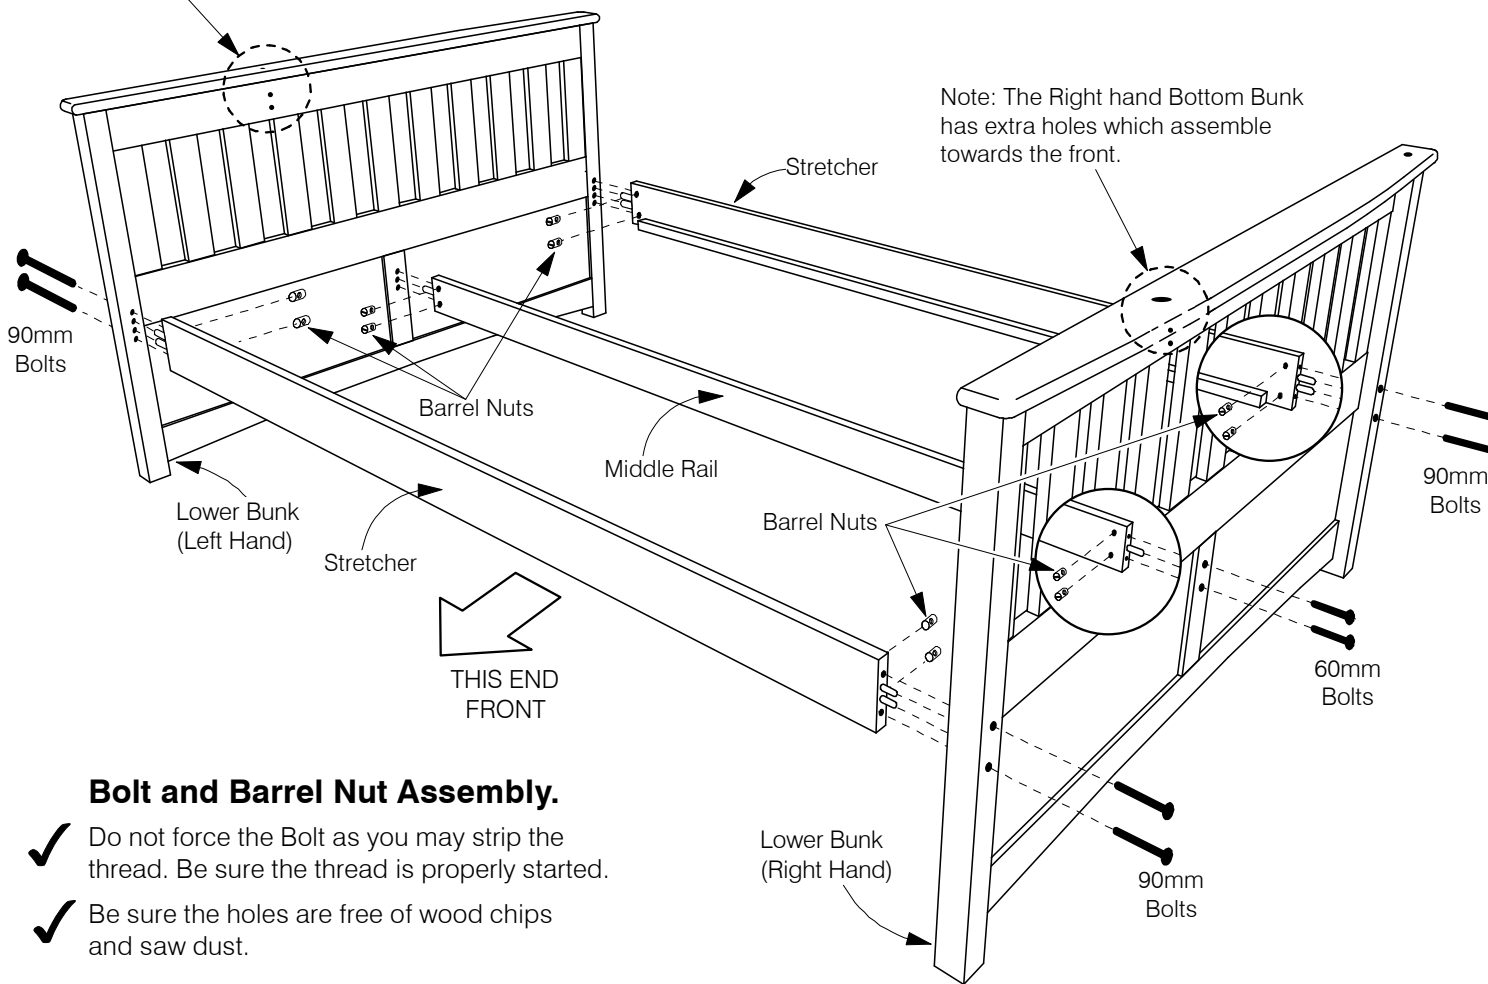

#### Bolt and Barrel Nut Assembly.

- ✓ Do not force the Bolt as you may strip the thread. Be sure the thread is properly started.
- ✓ Be sure the holes are free of wood chips and saw dust.


# Assembly Instructions

## Ginger Twin Full Bunk Bed

N&D 0116


### 3A Fit the Long Slats between the Stretchers.

Lay the Slats inside the Stretchers as shown below, and Bolts in place with 30mm Threaded Wood Bolts (total 4 Bolts)

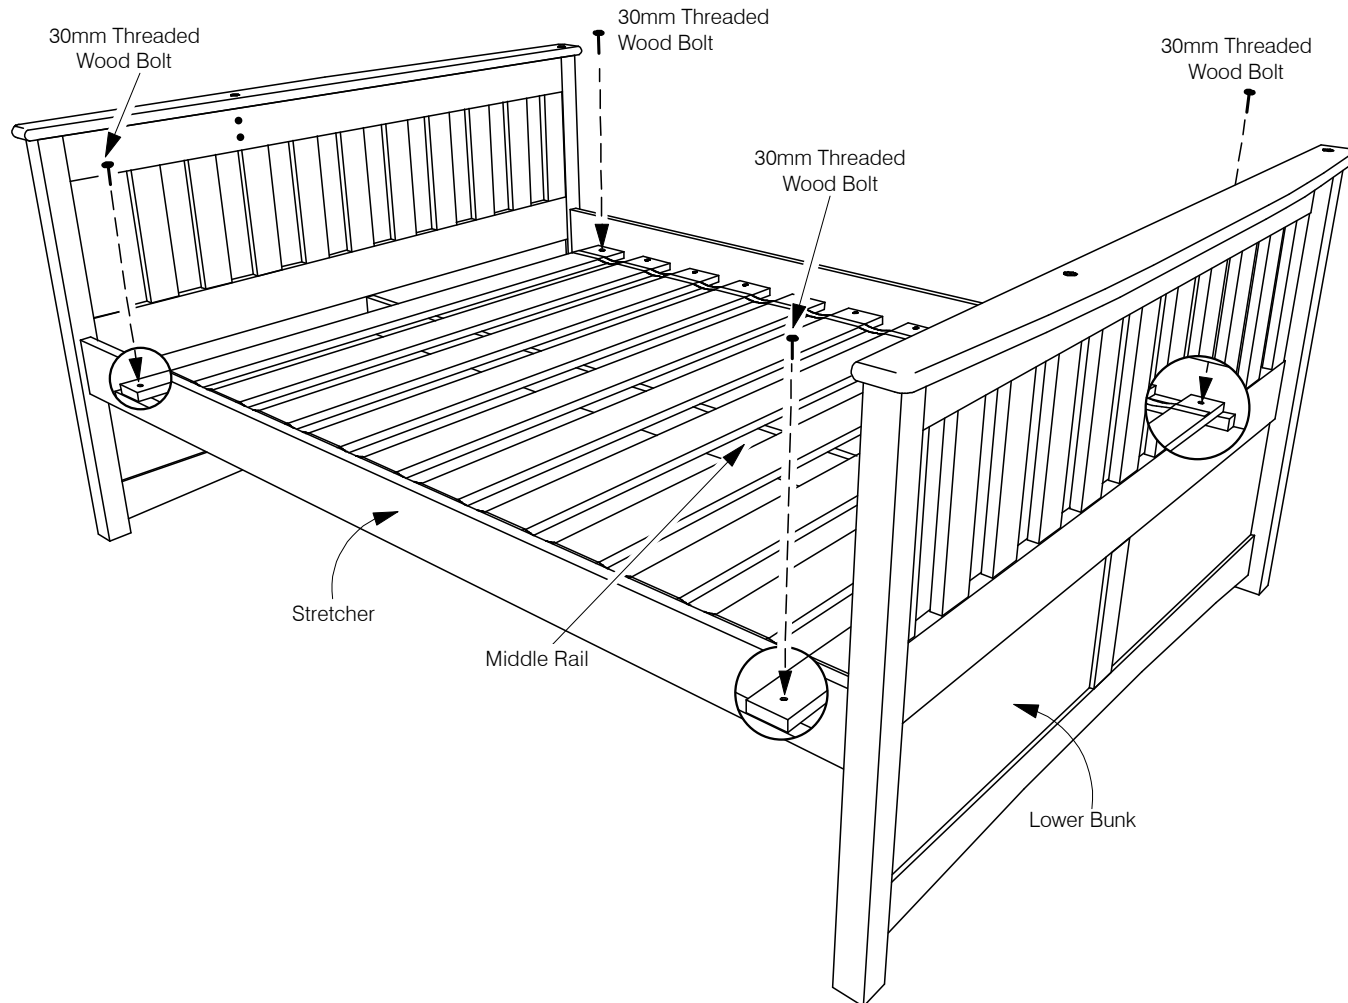

### 3B Fix the Remaining Slats with screws.

Use the wood screws to fix the remaining slats to the Stretchers (total 18 screws). An electric screwdriver will make this much easier.

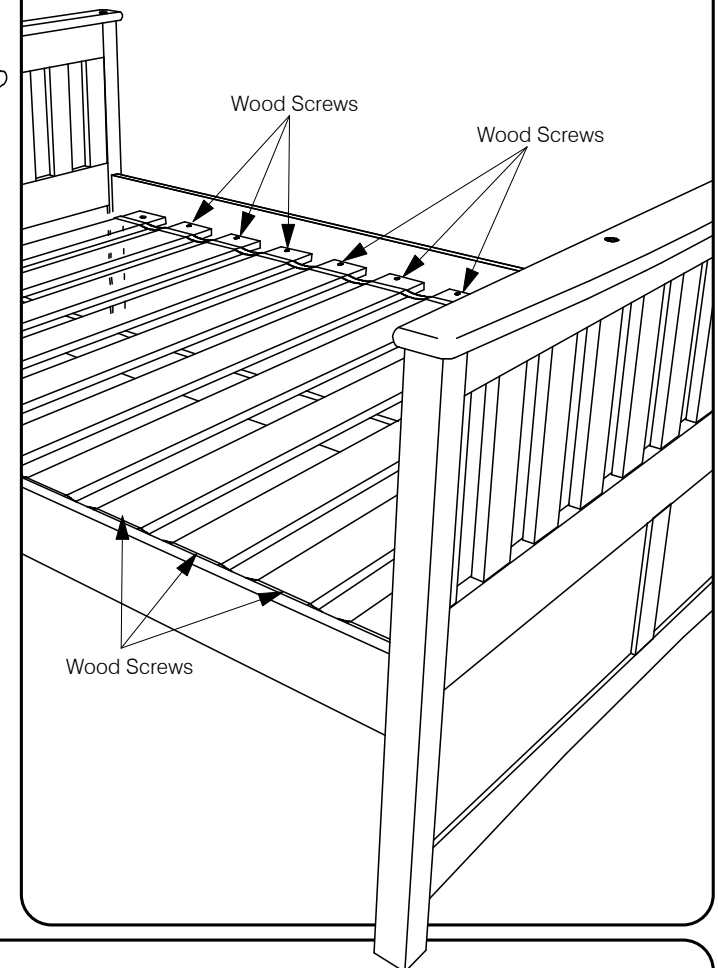

# Assembly Instructions

## Ginger Twin Full Bunk Bed


N&D 0808

### 4A Attach the Stretchers and Rear Guard Rail to the Upper Bunks.

Tap Wooden Dowels into the ends of the Stretchers and Rear Guard Rail. Using 90mm Bolts and Barrel Nuts, attach these to the Upper Bunk, carefully noting Left and Right hand sides.

### Bolt and Barrel Nut Assembly.

- ✓ Do not force the Bolt as you may strip the thread. Be sure the thread is properly started.
- ✓ Be sure the holes are free of wood chips and saw dust.

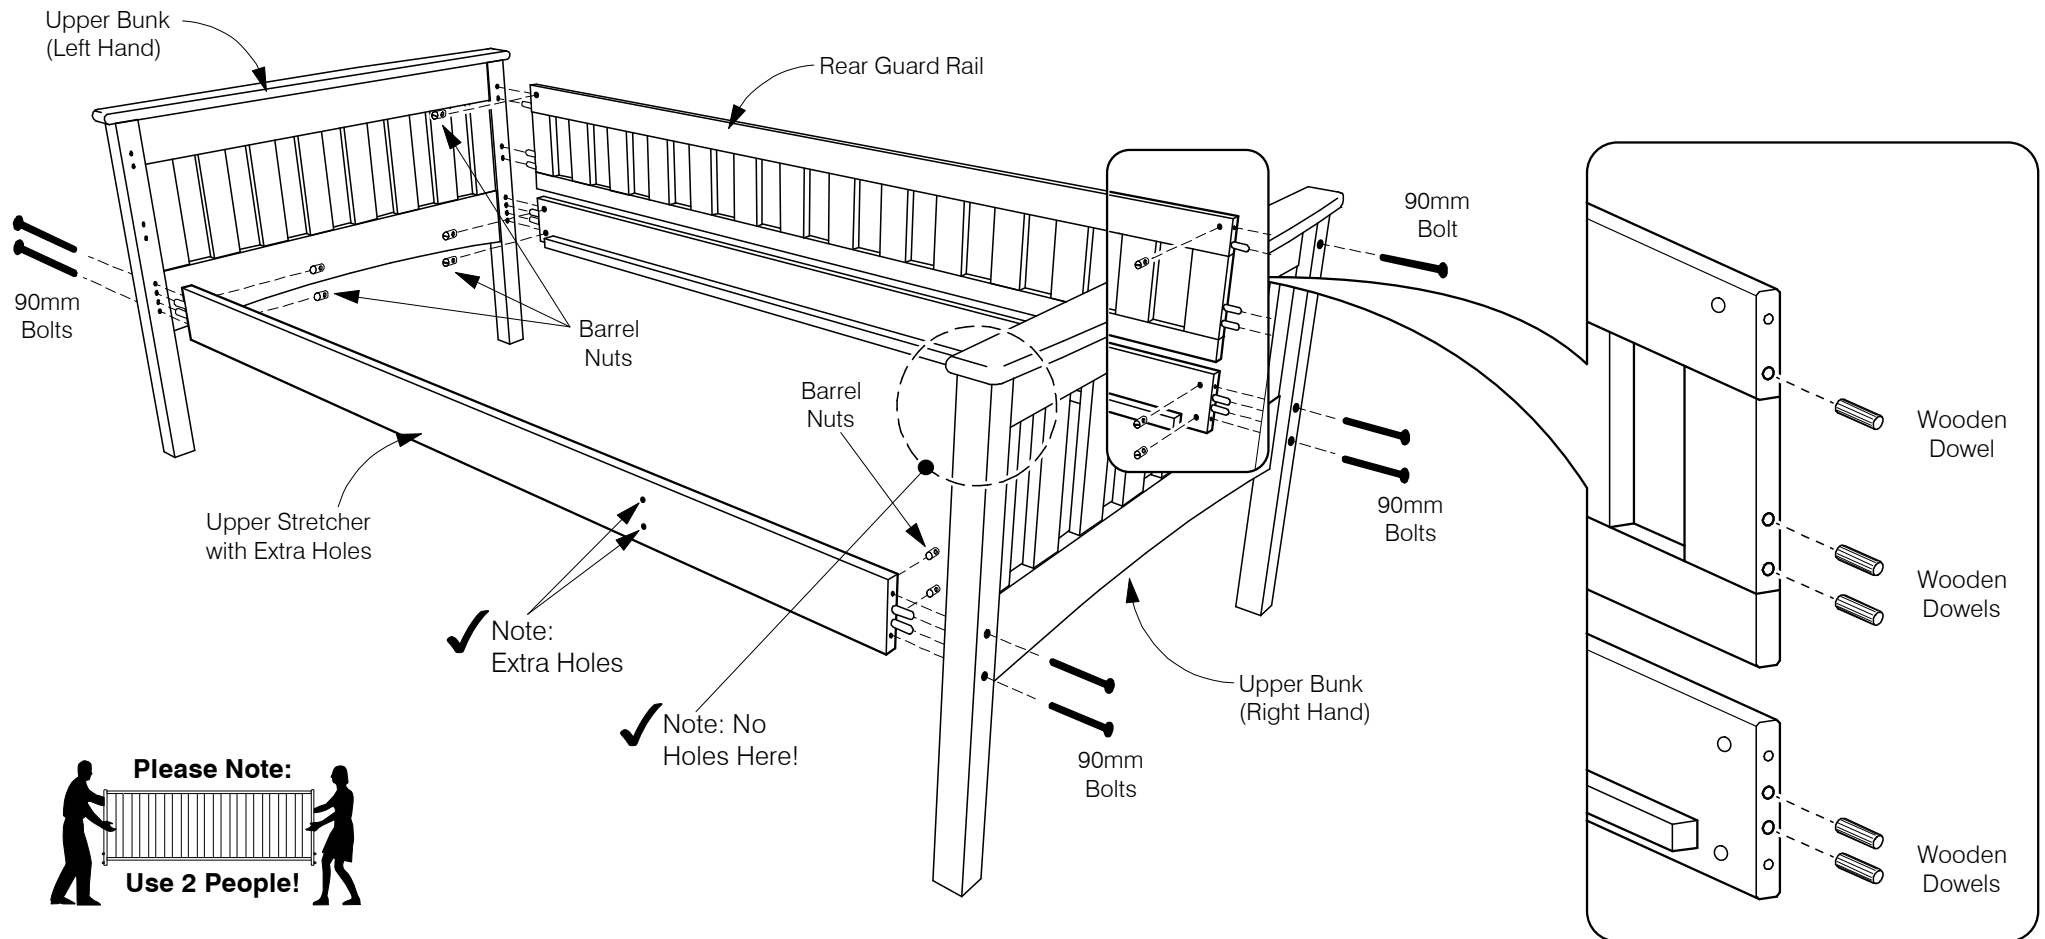


# Assembly Instructions

## Ginger Twin Full Bunk Bed

N&D 0808

### 5A Attach the Front Guard Rail to the Upper Bunk.

Tap Wooden Dowels into the ends of the Front Guard Rail. Use the 90mm Bolts and Barrel Nuts fix it in place. The Front Guard Rail attaches to the Stretcher using the 30mm Bolts.

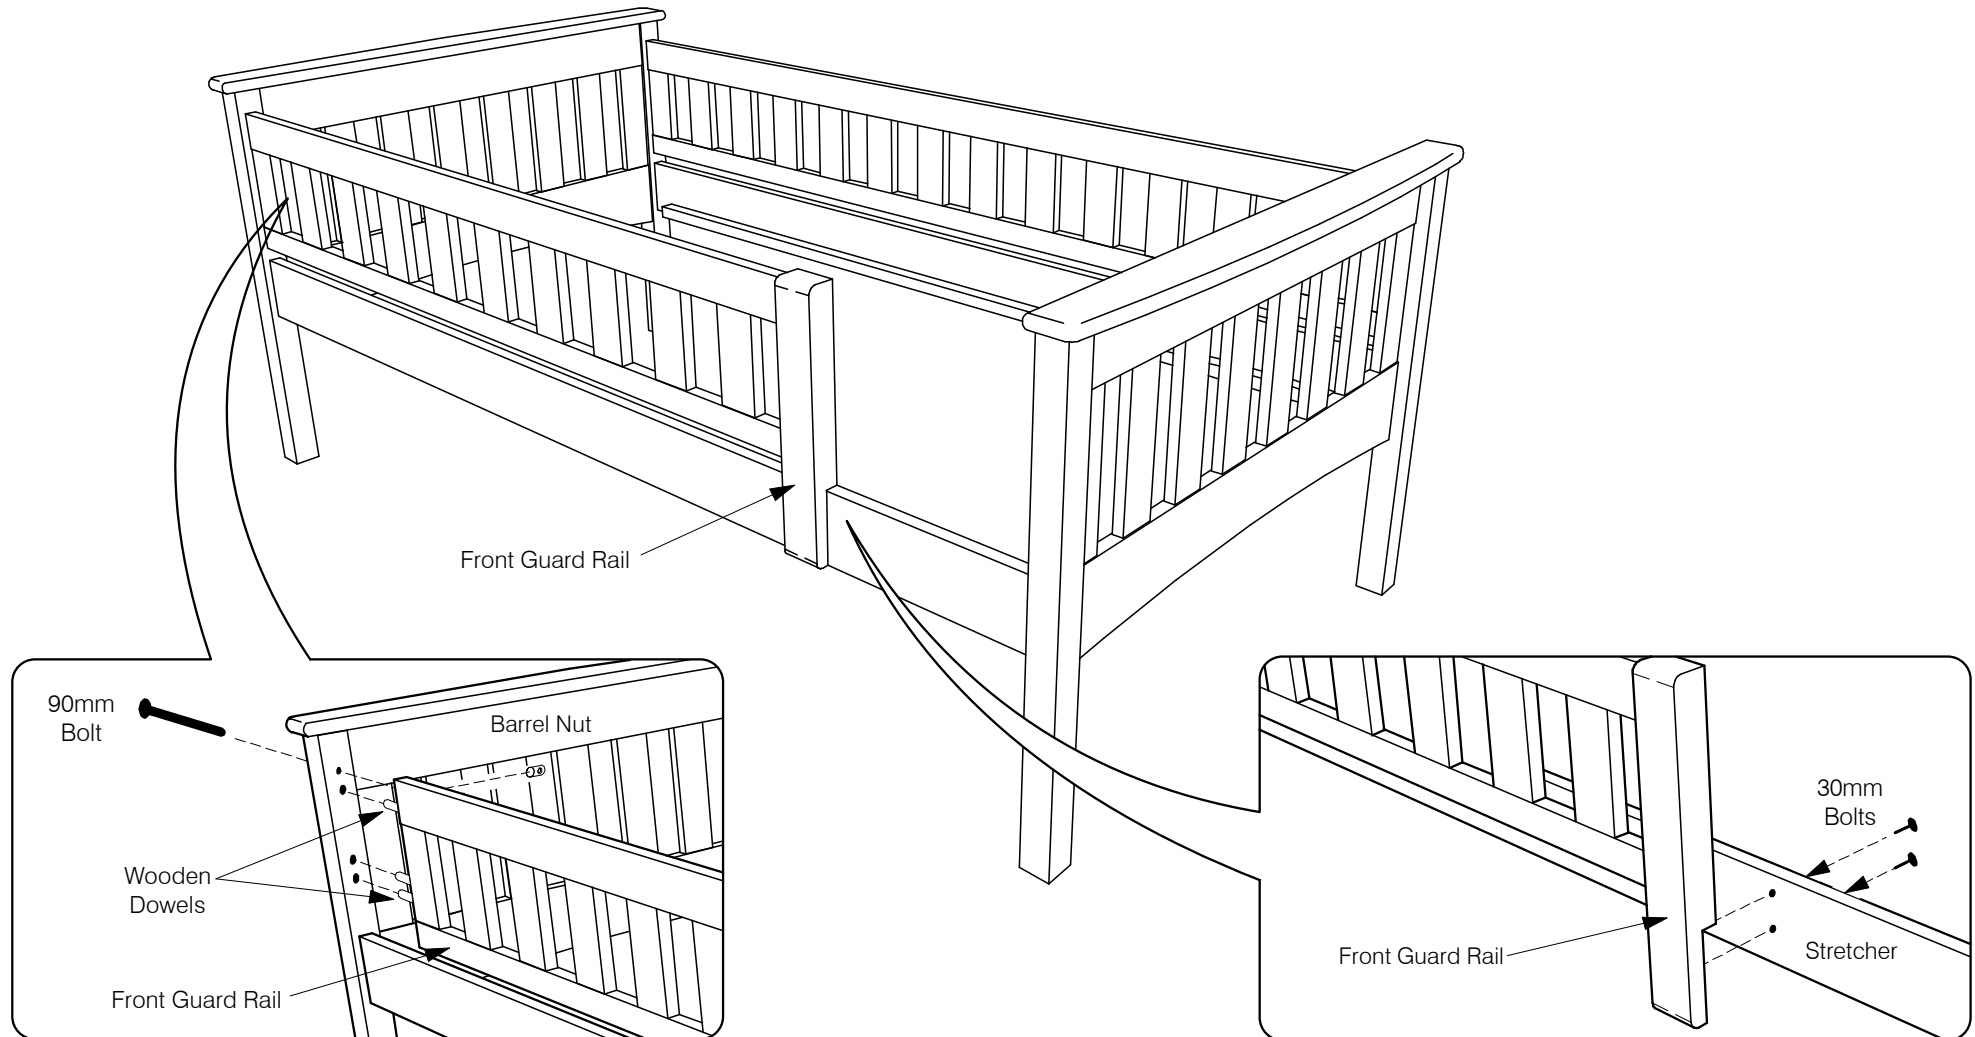


# Assembly Instructions

## Ginger Twin Full Bunk Bed

N&D 0116


### 6A Bolt the short Slats to the Stretchers.

Lay the Slats inside the Stretchers as shown below, and Bolt in place with the 30mm Threaded Wood Bolts (total 4 Bolts.)

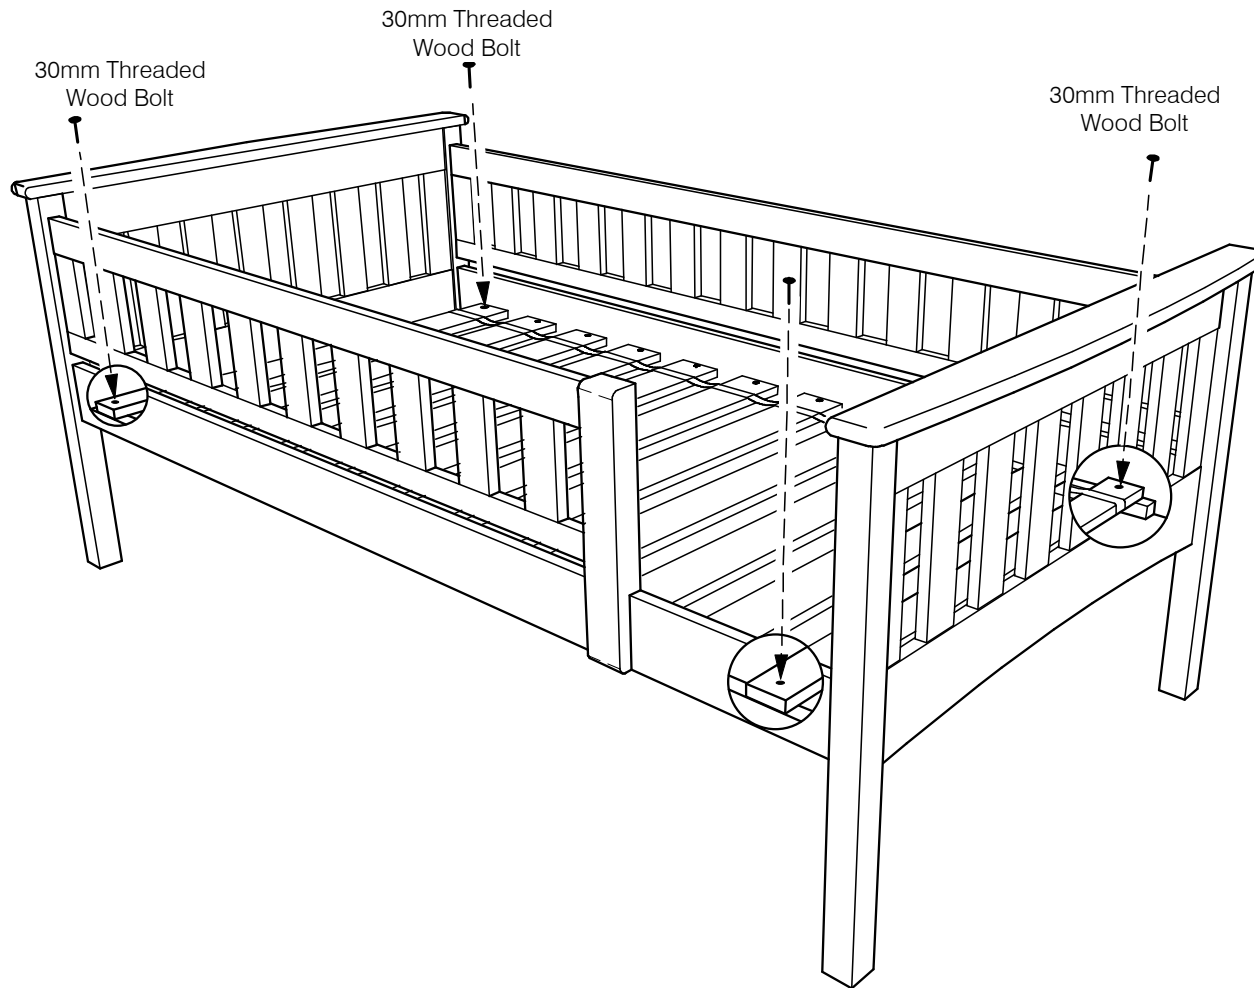

### 6B Fix the Remaining Slats with screws.

Use the wood screws to fix the remaining slats to the Stretchers (total 18 screws.) An electric screwdriver will make this much easier.

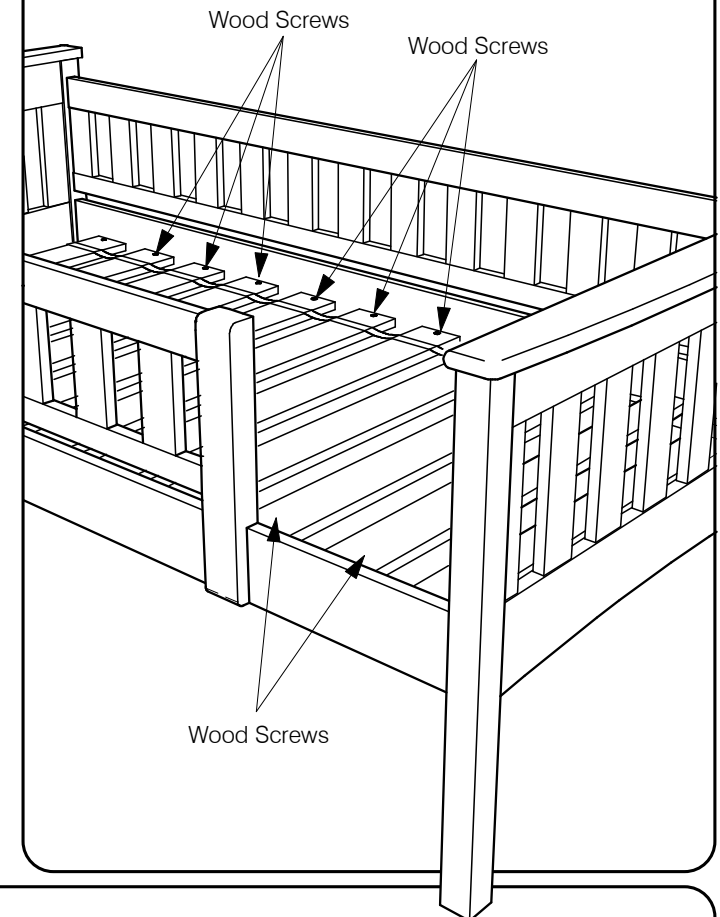


# Assembly Instructions

## Ginger Twin Full Bunk Bed


N&D 0207

### 7A Fit the Upper Bunk onto the Lower Bunk.

Fit the Metal Tubes into the holes on the top of the Upper Bunk.  
Carefully Lift the Top Bunk onto the Lower Bunk.

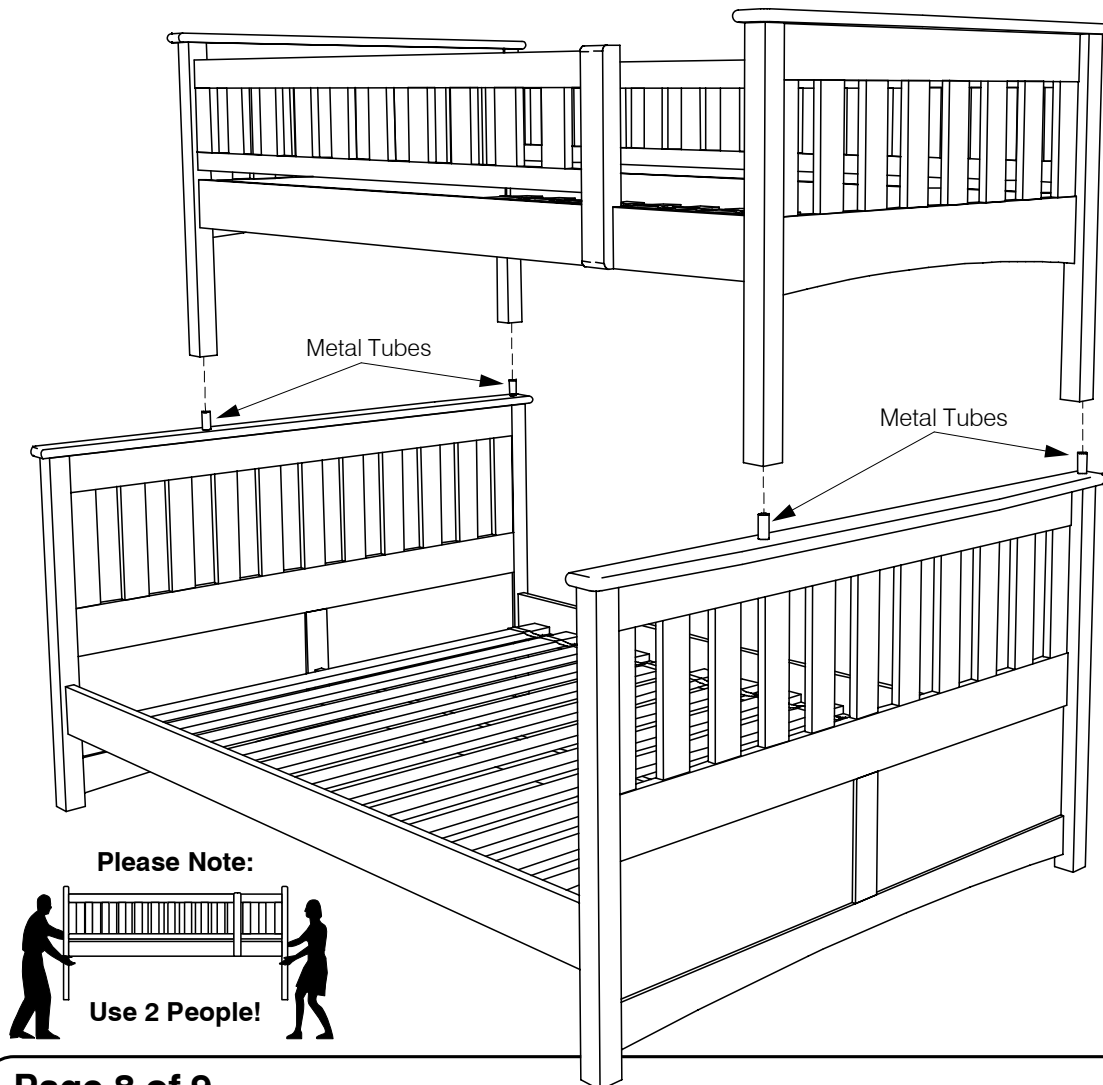


Please Note:

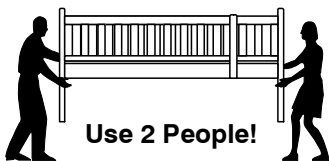

Use 2 People!

### 7B Fit the Brackets to the Legs.

Use the 60mm Bolts to fix the Brackets to the Upper Bunk and 40mm Bolts to the Lower Bunk.

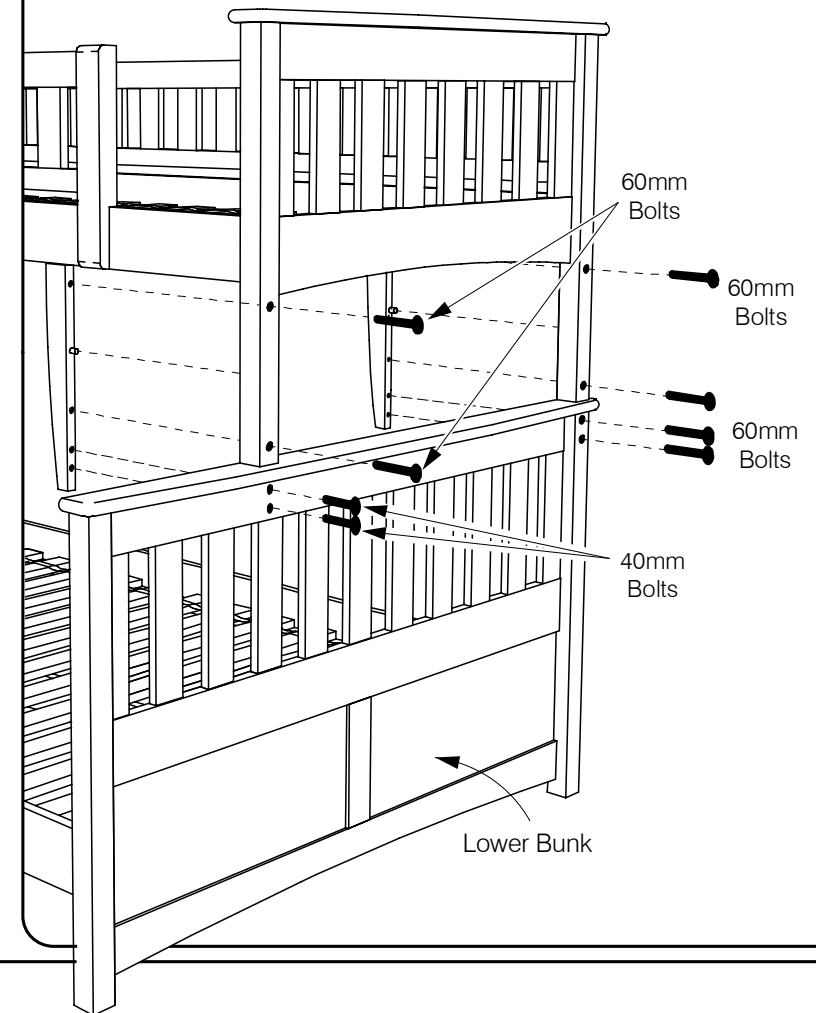



# Assembly Instructions

## Ginger Twin Full Bunk Bed

N&D 0207

### 8A Attach the Ladder to the Upper Stretcher.

Finally, hook on the Ladder onto the Upper Stretcher. Use the 16mm Wood Screws to fix the Ladder in place.

- Please take note of the warnings shown on page one of these instructions, printed on the carton box and on stickers on the Bunk bed.

